

SP 680 EC



SP 680 EC-LC

We care.

Customised Pumps - No Additional Costs!

Product Features

- Miniature diaphragm pump for gases
- Applicable as pressure or vacuum pump
- High efficiency and available in common supply voltages
- From low-cost to mid-class drives
- Low weight and small size
- Applicable for noise- and vibration-sensitive environments (i.e. hospitals, personal protection equipment, etc.)
- Installation in any mounting orientation allows simple device integration
- Leak-tight, oil-free and maintenance-free

Application Examples

Particularly suitable for portable and stationary devices such as:

- Gas analysers
- Anaesthesia monitoring
- Auto samplers
- Exhaust or flue gas analyzers
- Blood pressure monitoring
- Industrial pressure and vacuum
- Chromatography
- Pipetting devices

and many more...

Customisation

- We offer your customised precision pump without additional costs - even for small batches
- Our modular concept allows easy adaptations
- Outstanding quality - Made in Germany
- Excellent technical consultation and service by experts
- More than 40 years experience in pump applications
- Manifold mounting
- Fast delivery - order your sample now!



Schwarzer
Precision




The pumps listed below represent a typical selection of our wide range of eccentric pumps and are intended for initial tests.

Customised versions for your individual application would be made without additional costs - please contact us!

All flow values given under norm conditions (according to DIN 1343). Optional materials can cause deviating performance values.


| Designation | | SP 680 EC | | SP 680 EC-LC | |
|--|----------------------|---|---------------|---|---------------|
| Operating Voltage [Vdc] Art. No. | | 12 7s52076 | 24 7s52077 | 12 7s52083 | 24 7s52084 |
| Pneumatic Performance | | | | | |
| Free Flow [l/min] | | 6.2 | 5.0 | 7.0 | 6.6 |
| Pressure Side | | | | | |
| Flow at 300 mbar [l/min] max. Pressure [mbar] | | 4.0 1500 | 2.9 1200 | 4.0 1150 | 3.6 1200 |
| Vacuum Side | | | | | |
| Flow at -200 mbar [l/min] max. Vacuum [mbar] | | 3.0 -620 | 2.4 -540 | 3.0 -500 | 2.6 -600 |
| Motor / Power Consumption | | | | | |
| Standard Motor Type max. Nominal Current [mA] | | iron core / ball bearings 750 400 | | iron core / ball bearing and sintered bearing 1200 700 | |
| Optional Motor Types | | - | | - | |
| Construction | | | | | |
| Pump Head | standard optional | PPS customer specific - upon request | | | |
| Diaphragm, Valves | standard optional | EPDM / Silicone FKM | | | |
| Weight [g] | | 254 | | 265 | |

Performance Curves

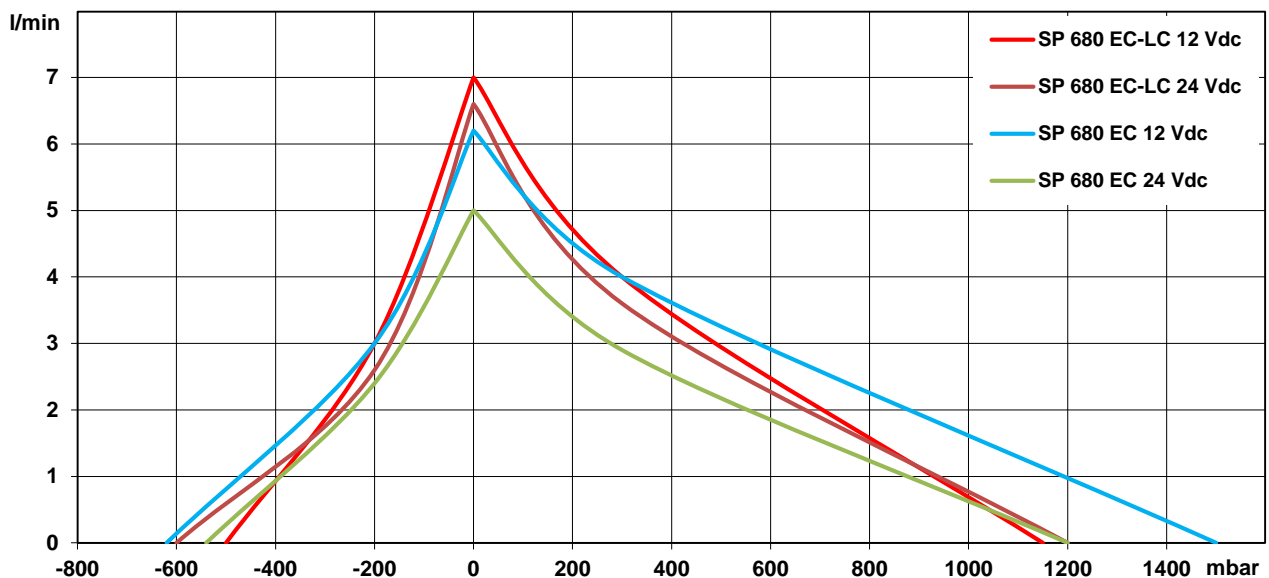




SP 680 EC

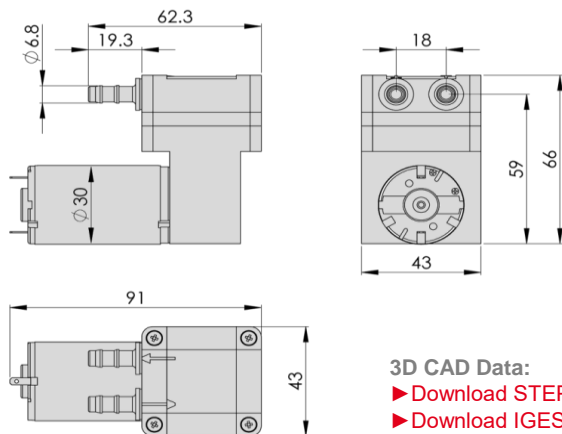

SP 680 EC-LC

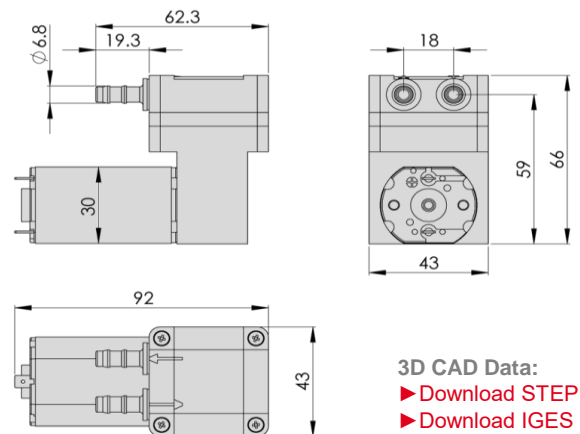


Standard: connection ports as shown
Optional: 3 other port positions possible

You can also download the 3D CAD data on the SP website:
► www.schwarzer.com/download



Customising Examples

Customising without compromises is extremely important to us. We develop precision pumps in direct collaboration with our customers - with all parameters exactly adapted to the respective application. Thanks to the modular pump design, this is done without added development-related costs! We develop the ideal pump for you. Uncompromising and reliable.

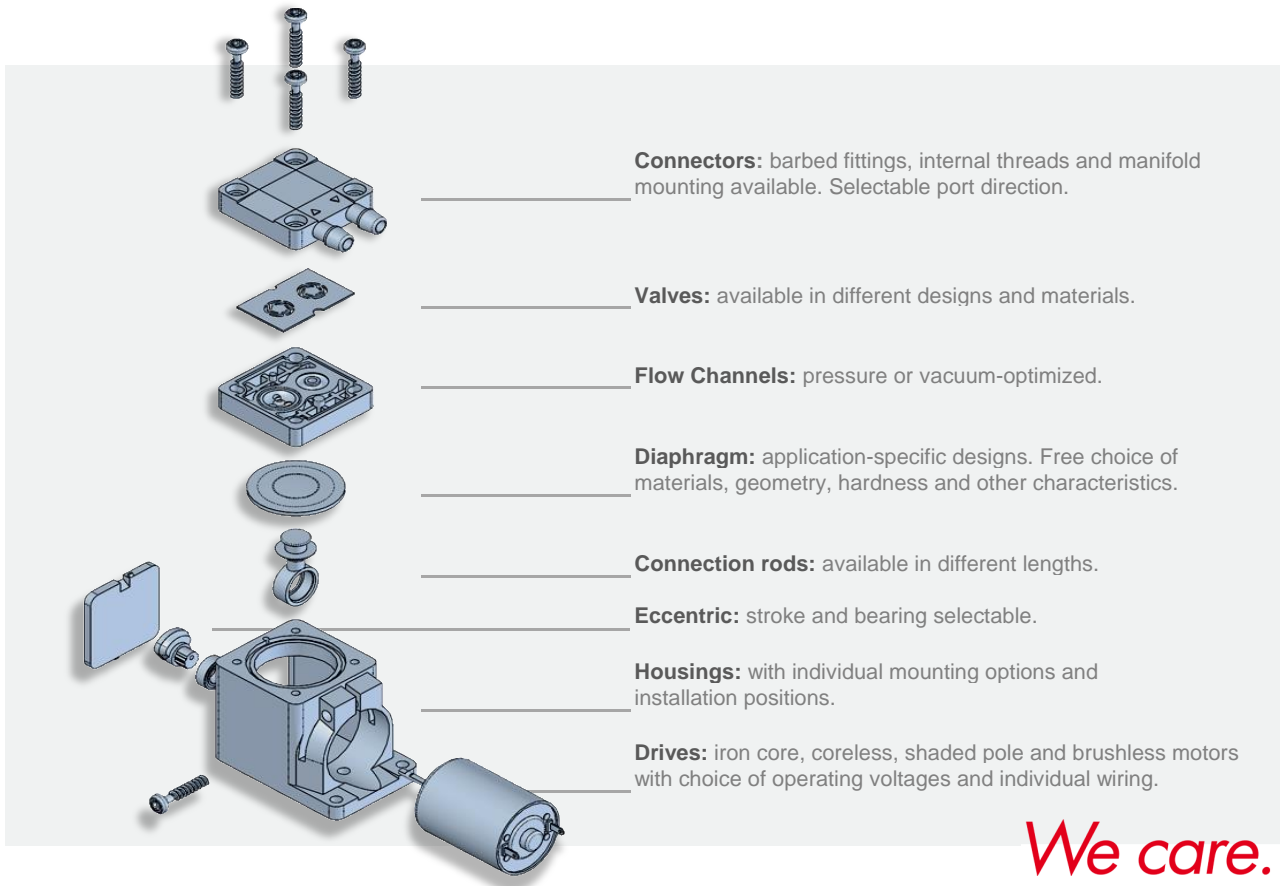

Installation Notes

In order to minimise noise and vibration we recommend securing the pump in one of the following ways:

- with rubber mounting (see "Accessories")
- with padded double sided adhesive tape
- with Velcro (hook and loop) tape for easy assembly and service
- Put the pump in a box lined with foam. Motor wires and tubing for the pump can lead through a hole in the side of the box.

Accessories

Schwarzer Precision offers a comprehensive portfolio of pump accessories such as:

- mountings
- silencers + filters
- electronics
- check valves + pressure switches